

Single Hole Lavatory Vessel Faucet Installation Instructions


CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi*

* If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (RPV).



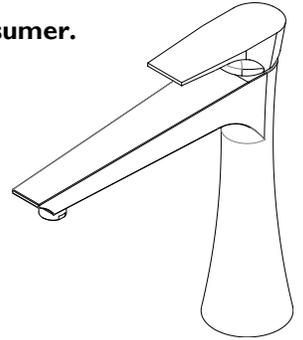


I INSTALLING FAUCET TO SINK/DECK

- Insert O-RING (2) into bottom of BODY (1) and center over sink/deck THROUGH-HOLE (3)

NOTE: Recommended sink/deck THROUGH-HOLE is $\varnothing 1\text{-}3/8\text{'}$

- Insert FLEX HOSE (5) (one at a time) and THREADED ROD (4) though sink/deck THROUGH-HOLE (3)
- From underside of sink/deck THROUGH-HOLE (3), place MOUNTING BRACKET (6) and NUT (7) onto THREADED ROD (4)
- Align BODY (1) so that spout is centered into sink
- Tighten NUT (7) until BODY (1) is secure to sink/deck

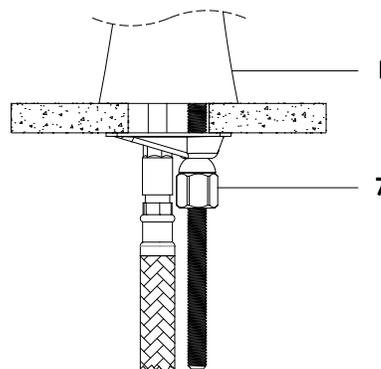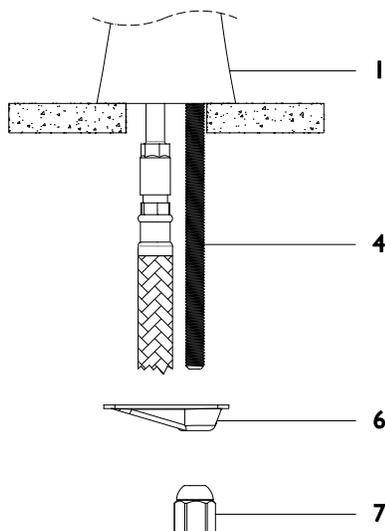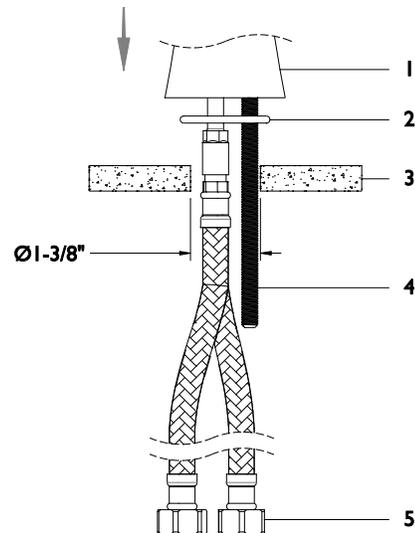

2 TYPICAL DRAIN INSTALLATION


This faucet does not come with a drain because the typical lift rod style drains are not practical for most vessel sinks. Vessel sinks are very unique and therefore a standard drain is generally not convenient. Cal Trim, a division of California Faucets, offers a complete selection of styles (e.g. Umbrella, Lift & Turn, Grid, etc...) and configurations (e.g. with/without overflow holes and partially/fully polished & finished) to compliment the range of vessel sinks available.

The following is a typical installation of Cal Trim's Tough Style Pop-Up Drain (9050L):

- Remove COLLAR (9) from drain assembly and apply SILICONE CAULK (10) (or equivalent) to underside of COLLAR (9)

CAUTION: Do not use or any oil base sealant that may damage finish

- Insert DRAIN BODY (12) from underside through sink DRAIN HOLE (11) and attach to COLLAR (9)
- Firmly tighten FLANGE NUT (15) against FRICTION WASHER (14), MACK WASHER (13) and sink DRAIN HOLE (11)

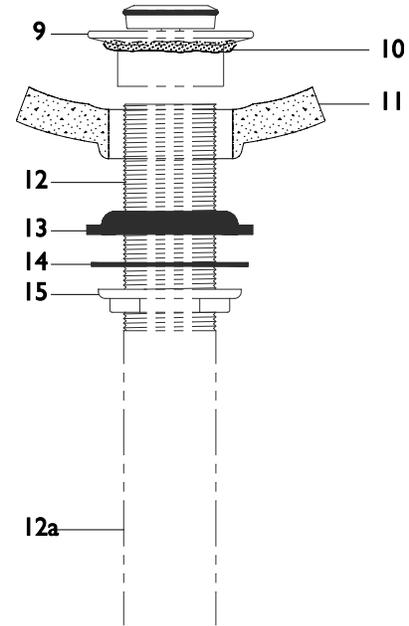

3 SUPPLY & WASTE CONNECTIONS

- Connect blue colored FLEX HOSE (5) to cold SUPPLY VALVE (16) and red colored FLEX HOSE (5) to hot SUPPLY VALVE (16)


IMPORTANT: Flush supply lines and valves prior to installation to prevent damage and malfunction of cartridge

- Connect waste P-TRAP (17) to drain TAILPIECE (12a)

NOTE: Supply valves and P-Trap are not supplied with faucet. See CAL TRIM for complete selection of matching products in desired finish

- Turn on cold and hot SUPPLY VALVES (16)
- Slowly open faucet lever by lifting lever and rotate to left and right
- Check all connections for leaks and repair as necessary
- Give these instructions to consumer for safe keeping

NOTE: Occasionally, due to water conditions it may be necessary to remove aerator and clean debris off with soft bristle toothbrush

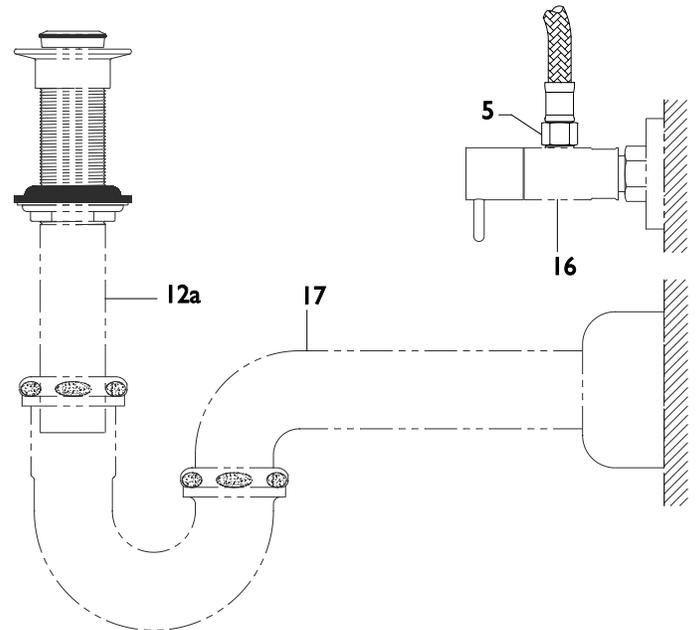

californiafaucets.com

5271 Argosy Ave. Huntington Beach, CA 92649
800-822-8855